

'Slingpod'® Innovative design!

User Instructions

Attaching the Camera to the Slingpod is a relatively simple procedure:

1. Unscrew the base plate from the handle and un-wind the strap.
2. Attach the base plate to the camera using the tripod mount Fig 2, making sure the screw is nice and tight, should the base plate still be loose then you will need to fit an additional washer to space out the screw from the base plate (supplied).
3. Unscrew the camera strap retainer(D ring) on the end of the handle Fig 3 and slide your camera strap into the slot, then screw back the D ring to stop the camera strap from sliding out.
4. Adjust straps to level camera Fig 4, it is also a good idea to make sure when standing normally the camera cannot make contact with the ground when walking around.
5. The sling pod has an area to fit a remote trigger (not supplied) which is attached via Velcro. Attach the Velcro supplied to your remote and attach to the handle, once this is plugged into your camera you are ready to take those unique shots. Fig 5.
6. For extra safety we recommend you buy a good quality wrist strap and attach to the D ring on the end of the handle. Fig 3.
7. Note when using a larger style lens the base plate can be attached to screw mount on the lens itself or to a lens collar. This will allow you to achieve the correct balance with the larger lens.
8. A good lens to start using with the sling pod with is a 17 to 55 mm Zoom lens.



Fig 1



Fig 2



Fig 3

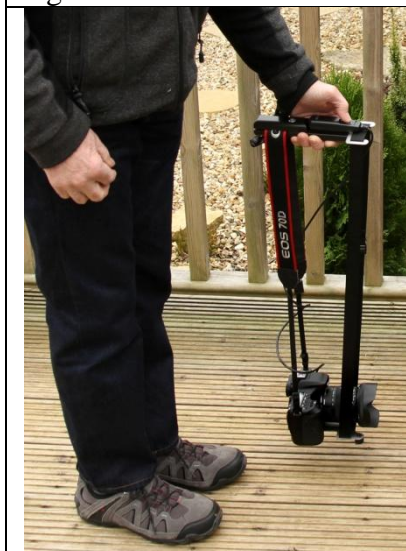


Fig 4



Fig 5